


LIFT ACCESS TCP/IP WIRING DIAGRAM

CTRL-1DRSMTLIFT-TCP/IP(3.0A)-PCB


Inside Lift Car

+12V---- RED
 0V ----BLACK
 D1----WHITE
 D0----GREEN
 GLED----ORANGE (AY-H020)
 GLED----BROWN (RD-J20)
 TAMPER----PURPLE
 BUZZ----YELLOW

IN READER

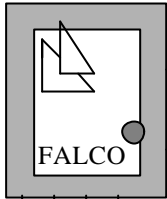

RJ45 CONNECTOR COLOUR CODE		
	DIRECT CABLE	CROSS CABLE
1	White Orange	White Green
2	Orange	Green
3	White Green	White Orange
4	Blue	Blue
5	White Blue	White Blue
6	Green	Orange
7	White Brown	White Brown
8	Brown	Brown

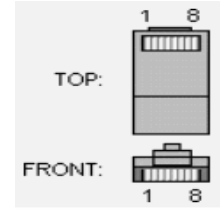


IP ADDRESS

The default IP address should be showed on a warranty sticker with a square onto the numbers.

Example:

XXXXXX

Then the IP for the door controller would be 192.168.1.XX

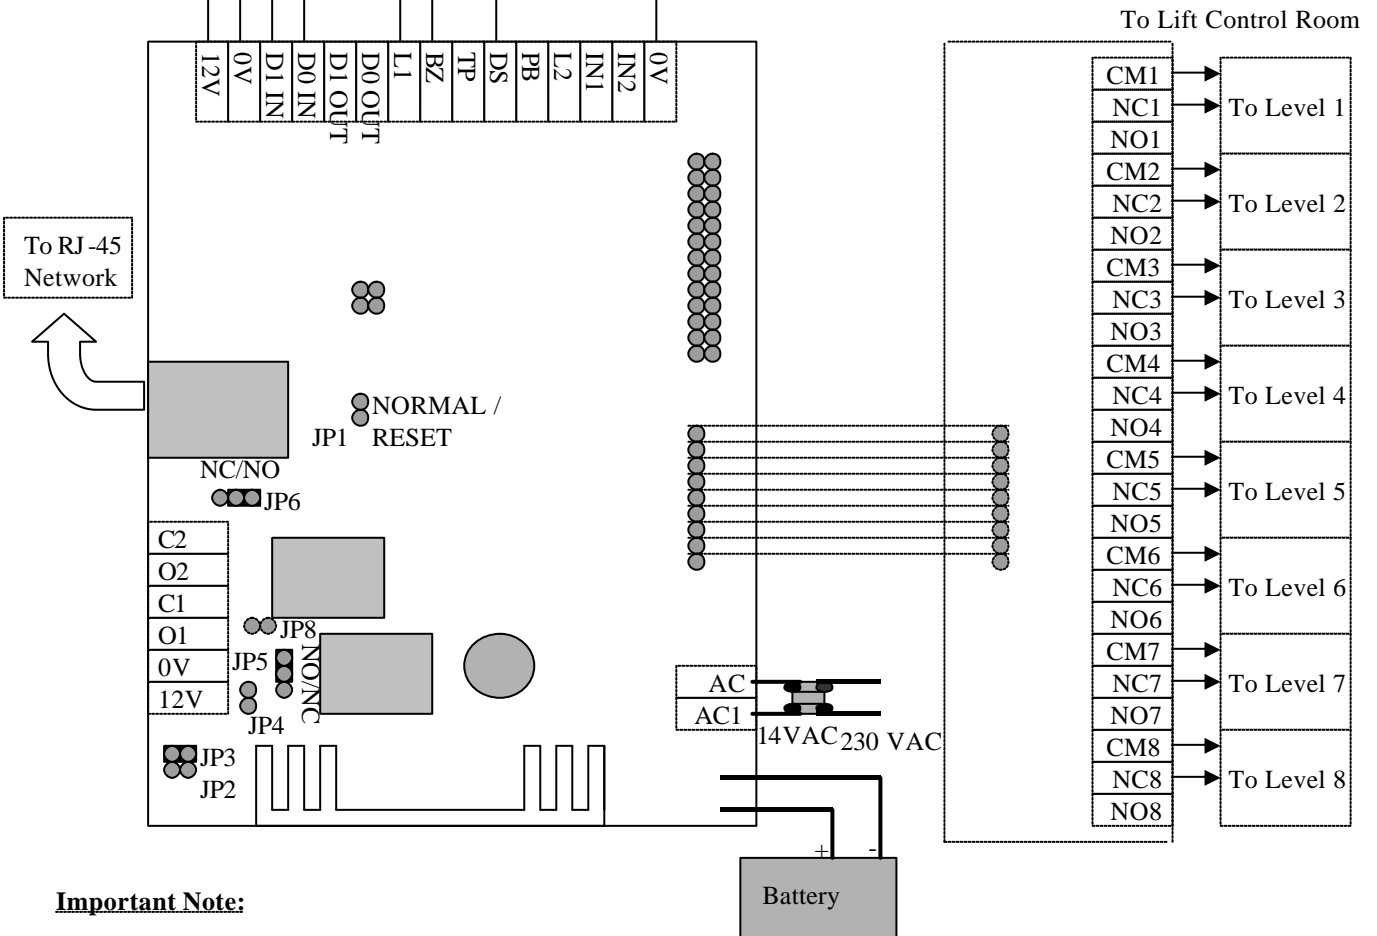

Important Note:

DS and 0V must be short if door sensor is not installed.

Please do not connect reader unshielded cable and reader any cable to earth

For Best Result
Please solder the wire tip before termination