


LIFT CONTROLLER (2W)

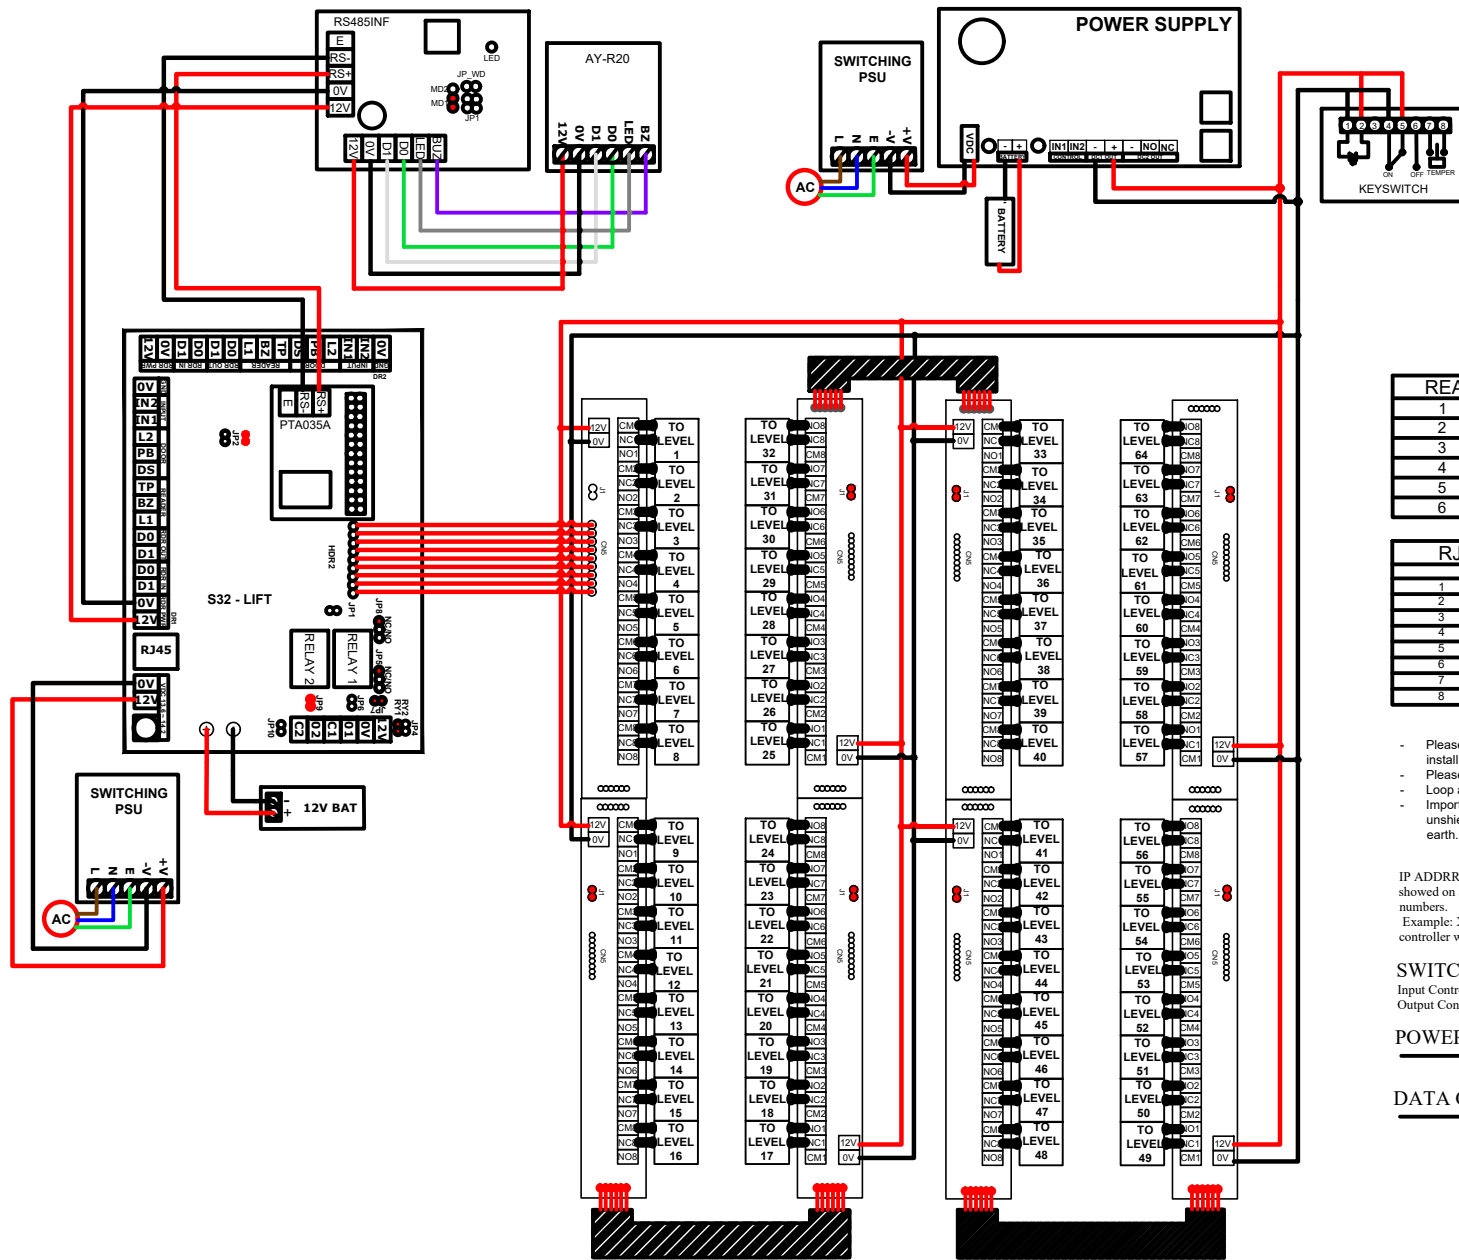

READER COLOUR CODE		
1	+12V	RED
2	0V	BLACK
3	D1	WHITE
4	D0	GREEN
5	LED	GREY
6	BUZZER	PURPLE

RJ-45 COLOUR CODE		
	DIRECT CABLE	CROSS CABLE
1	WHITE-ORANGE	WHITE-GREEN
2	ORANGE	GREEN
3	WHITE-GREEN	WHITE-ORANGE
4	BLUE	BLUE
5	WHITE-BLUE	WHITE-BLUE
6	GREEN	ORANGE
7	WHITE-BROWN	WHITE-BROWN
8	BROWN	BROWN

- Note:**
- Please jump 0V and DS if door sensor is not install
 - Please cut off J11 if using power supply
 - Loop all 12V and 0v to all output module
 - Important: Please do not connect reader unshielded cable and reader any cable to earth.

IP ADDRESS: The default IP address should be showed on a warranty sticker with a square on to the numbers: XXXXX. Then the IP for the door controller would be 192.168.0.XX

SWITCHING POWER SUPPLY
 Input Controller supply 13.8V 4A
 Output Controller supply 12V 2A

POWER CABLE TYPE
 18 AWG 2 Core

DATA CABLE TYPE
 22 AWG