


AY-UF355 STANDALONE

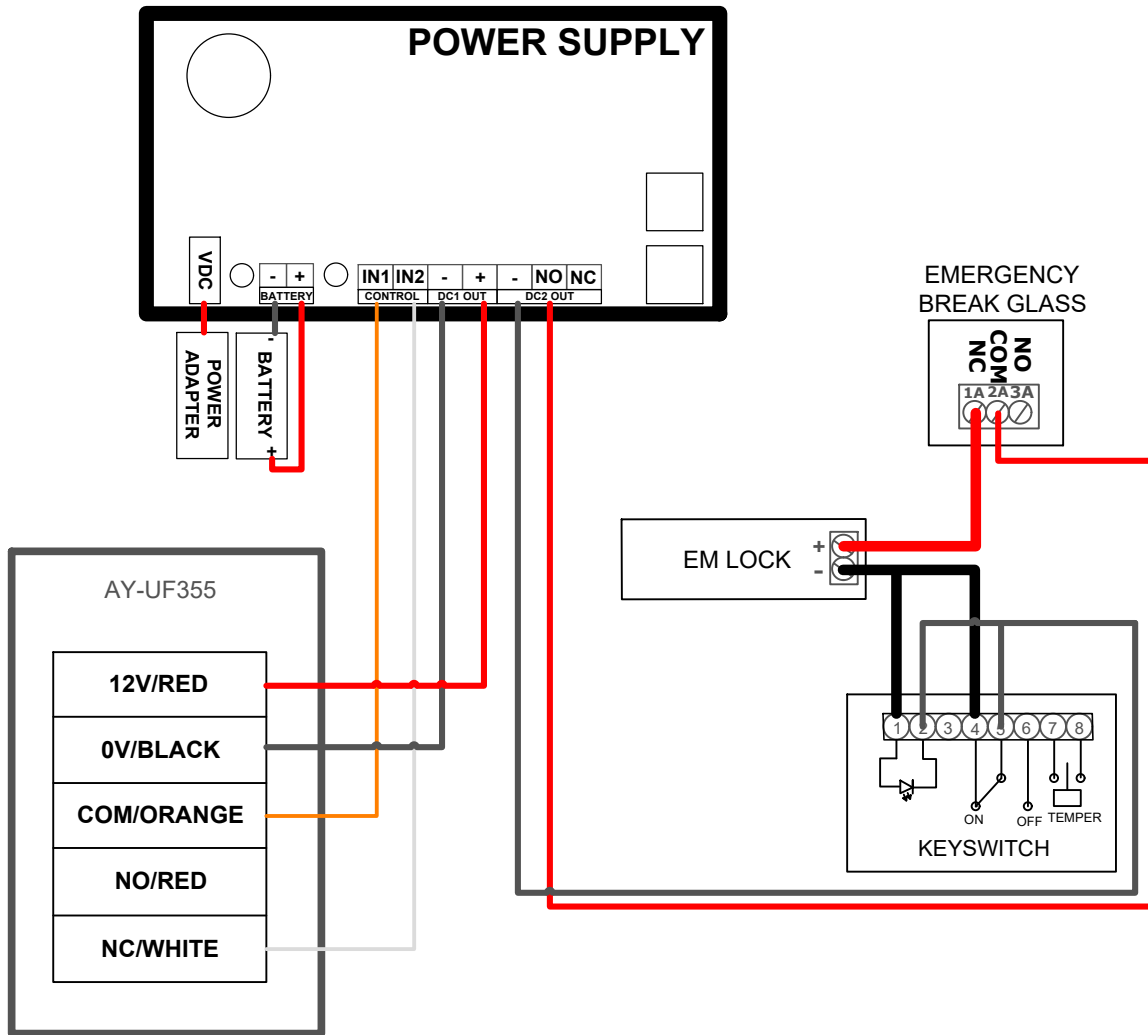

IP ADDRESS: The default IP address should be showed on a warranty sticker with a square on to the numbers.

Example: XXXXX. Then the IP for the door controller would be 192.168.0.XX

POWER CABLE TYPE

— 18 AWG 2 Core

— 22 AWG 4 Core

POWER ADAPTER

12V 2A - Only for single Face Recognition device only

12V 5A - For More than 1 Face Recognition device

Input Controller supply 12V 0.5A

Output Controller supply 12V 2A