


S32 LPR Controller

Full Wiring Diagram - LPR Controller

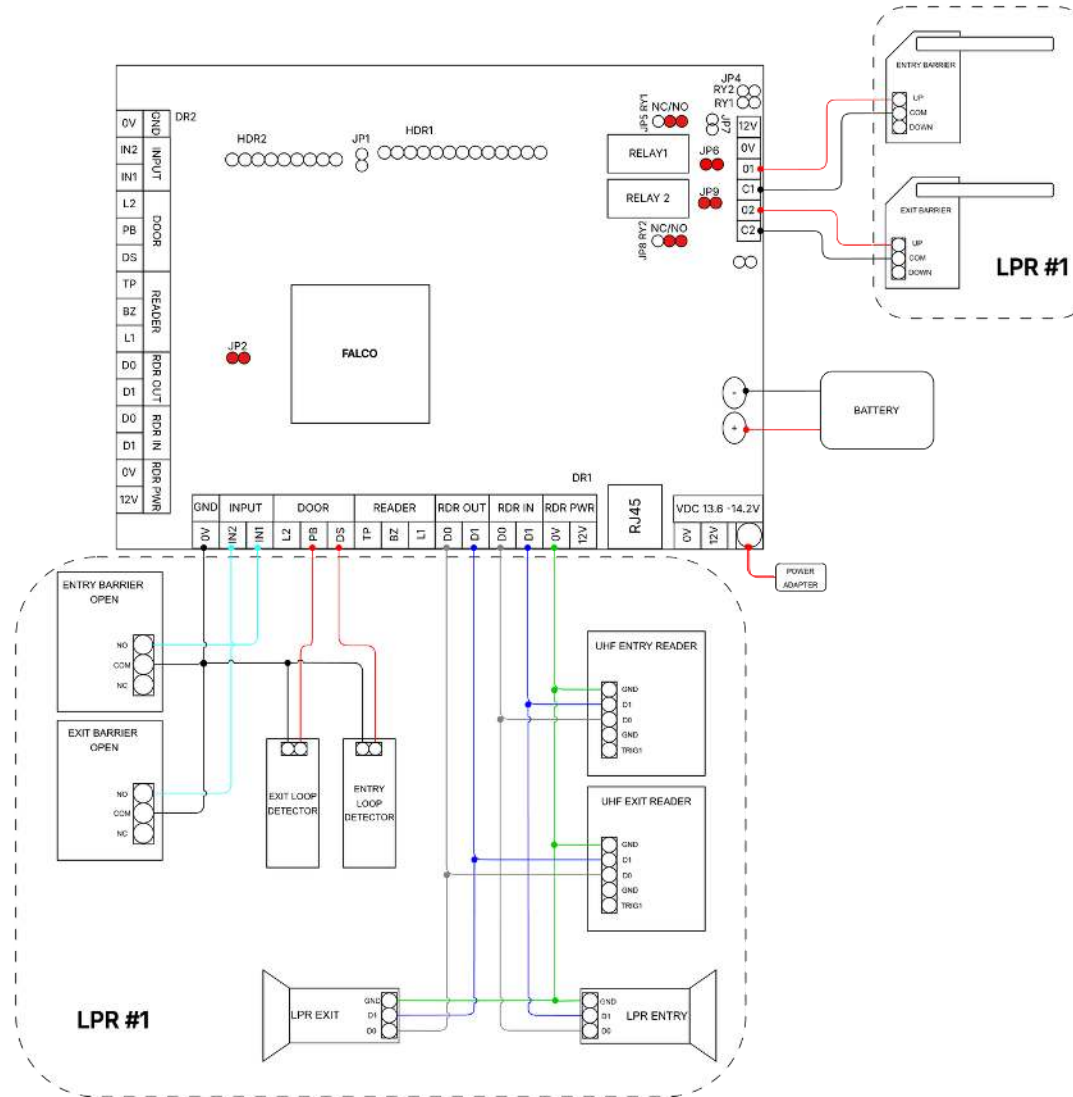

Camera

Wiring	Colour
GND	Red
D1	Brown1
D0	Blue

*Refer Reader Wiring Guide to confirm brown cable connection.

Relay Setting

	1	2
Power Lock	RY-Close JP7-Close JP6-Open	RY-Close JP10-Close JP9-Open
Dry Contact Lock	RY1-Open JP7-Open JP8-Close	RY2-Open JP10-Open JP9-Close
Normally Open	JP5 JP8	JP5 JP8

Power Cable Type

18 AWG 2 Core

13.6V 3A

IP Address Setup

The default IP address is printed on the warranty sticker, with a square highlighting part of the numbers.

Example: X.X.[X.X]. The IP address for the door controller will be:

192.168.0.X.X

Wiring Diagram - LPR Camera

